

BeoSound 4

Supplement

Menu system

This supplement contains corrections to your BeoSound 4 Guide. Due to new software, your music system has been equipped with new features.

The menu system has changed compared to the one mentioned in your Guide.

1	N.MUSIC	12	SETUP
2	N.RADIO		A.MEM
3	A.AUX		EDIT A.MEM
4	RANDOM ON/OFF		FORMAT MEMORY CARD
5	REPEAT ON/OFF		COPY PROTECTION
6	EDIT CD ON/OFF		RADIO
7	TIMER ON/OFF		AUTO TUNING
8	EDIT A.MEM		DAB ONLY AUTO TUNING
	ARRANGE CONTENT		ARRANGE PROGRAM
	RENAME FOLDER		ADD PROGRAM
9	PLAY TIMER		EDIT PROGRAM
	1-8 TIMER		DAB AERIAL ADJUSTMENT
	ON/OFF		DAB DRC
	SOURCE		CD
	PROGRAM		NAME CD
	START/STOP		EDIT CD
	DAYS		TIMER
	NAME		TIMER ON/OFF
10	TIMER RECORDING		PLAY TIMER
	1-8 TIMER		TIMER RECORDING
	ON/OFF		SOUND
	SOURCE		OPTIONS
	PROGRAM		SET CLOCK
	START/STOP		SELECT LANGUAGE
	DAYS		DISPLAY SETUP
	NAME		MENU OPTIONS
11	SHOW CLOCK		CD DELAY

This menu system overview replaces the overview illustrated in your Guide.

The new features and functions are highlighted above and explained on the following pages.

The music system remembers up to 8 Timers. If you have a SD card (optional accessory), you can make recordings. You can record available sources or programmes at any time you specify.

The **TIMER RECORDING** menu is only available in the main menu if you have added it in the **MENU OPTIONS** menu under **OPTIONS**.

You can name your Timers for easy recognition and switch each of your Timers on or off individually.

You can change your Timers at any time.

What's on the **TIMER RECORDING** menu ...

ON/OFF ... Activate or deactivate each of your programmed Timer Recordings.

SOURCE ... Select a radio source for your programmed Timer Recording. If you select radio as your source, select a program number too.

START/STOP ... Enter the start and stop times of your Timer Recording.



DAYS ... Select which specific days of the week, this Timer Recording should be activated – you move between the days by means of the arrow buttons. Turn the wheel counter-clockwise to deselect a day, press the wheel to select a day and move on to the next day.

NAME ... Name your different Timer Recordings for easy recognition.


TIMER RECORDING ...

- 1 **TIMER 1**
 - 1 ON/OFF
 - 2 SOURCE (PROGRAM)
 - 3 START/STOP
 - 4 DAYS
 - 5 NAME
- ...
- 8 **TIMER 8**

You can set a delay for when the CD starts playback and you can choose only to play your favourite tracks. You can also copy selected tracks to your SD card.

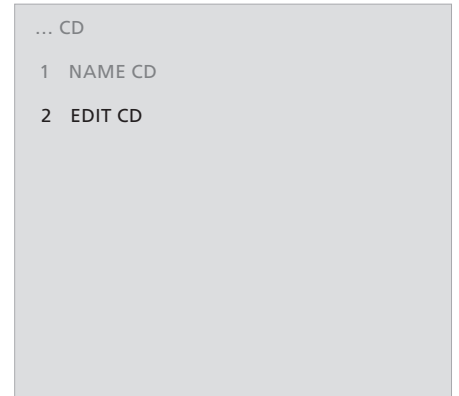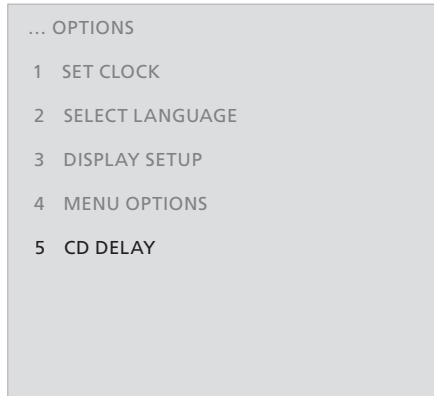

Delay of CD playback

CD DELAY ... Use this menu to delay the CD playback in your product setup. This will ensure that your TV has enough time to switch on the speakers before the music starts. The delay is set in seconds. Use the wheel  to set the delay.

Playback of favourite CD tracks

EDIT CD ... Use this menu to exclude which tracks on a CD you do not want to play.

To play back the edited CD select EDIT CD ON in the main menu. The EDIT CD ON/OFF menu is only available if you have added it in the MENU OPTIONS menu under OPTIONS.

Long press on ◀◀ or ▶▶ starts fast forwarding or rewinding of current A.MEM track. Press GO to resume playback. When CD is selected as source only a short press on ◀◀ or ▶▶ is needed.

To exclude a track ...

- > Press **GO** to exclude a track. This will also make the cursor move to the next track.
- > Press **▶▶** to step forward in tracks without making a selection.
- > Press **◀◀** to step back in tracks without making a selection.
- > Press **GO** to include a track you have excluded previously.
- > Press **STORE** to accept the changes, or ...
- > ... press **EXIT** to leave the menu without storing the selection.

Copy selected tracks to your SD card

You can select which tracks you want to copy to your SD card. While playing a CD, press **RECORD** twice. The text 'copy all tracks' appears and you choose between 'yes' and 'no'. To select only your favourite tracks choose 'no' and press **GO** to include or exclude a track.

Press **STORE** to start your recording or **EXIT** to cancel your recording and exit the menu.

Playback continues from the same track and time position the next time you switch on your music system unless the memory card has been ejected.

Technical specifications, features and the use thereof are subject to change without notice.

3500327 0906