

BeoSound 5

Guide



BANG & OLUFSEN

Dear Customer

This Guide contains additional information about your product and describes certain features and functions from the Getting Started in more detail.

Among other things you can find information about settings, how to operate your product with a Bang & Olufsen remote control, and how to make your digital music available.

This Guide will be updated on a regular basis to make it reflect, for example, new features and functions introduced with software updates.

Using the optional CD Ripping Device as described in this guide of course requires that the BeoSound 5 is equipped with the optional CD Ripping Device and that the system is updated to software version 7.02 or higher. The new settings included in the software update and influencing the use of the CD Ripping Device is written in blue in this guide.

You can also find additional information about your product in the Frequently Asked Questions section on www.bang-olufsen.com/faq.

Technical specifications, features and the use thereof are subject to change without notice.

Contents

Menu overview, 4

Find an overview of display menus.

Close-up operation, 7

How to use the physical controls of your music system.

How to use Beo5 or Beo6, 8

How to operate your music system with a Beo5 or Beo6.

Two-way communication, 9

How to use Beo6 for two-way communication

How to use Beo4, 10

How to operate your music system with a Beo4.

Adjust sound settings, 11

How to make adjustments for balance, bass, treble, etc.

Change language and time zone, 12

How to change the display language.

The maintenance menu, 13

How to use the clean-up function. Settings for automatic software update and information on the latest software. How to make a manual software update.

Service settings, 15

Change the netradio buffer time or disable the MOTS function. Make settings for the optional CD Ripping Device and set it up to be used mainly as a ripping device or as a CD player.

Network setup, 19

Your music system in a Network Link setup. Host name, IP address and password.

How to make music available, 21

How to make music sources available for playback.

Create coloured lists and numbered favourites, 27

How to make personal playlists.

MOTS, 28

Find information about MOTS.

The Roles menu, 29

Use your music system for Play Timers and more. How to change audio master settings and source names.

Change start-up time, 32

How to adjust the default start-up time.

Menu overview

N.MUSIC/A.MEM/CD	COVERS	
	ARTISTS	
	ALBUMS	
	TITLES	
	FAVOURITES	
	QUEUE	
N.RADIO/RADIO	GENRES	
	LANGUAGES	
	COUNTRIES	
	NAMES	
	FAVOURITES	
CD/A.MEM/N.MUSIC* ⁴ * ⁵	TITLES	
A.AUX		
SETTINGS	SOUND* ¹	VOLUME
		BALANCE
		BASS
		TREBLE
		LOUDNESS
		SPEAKER TYPE
	SYSTEM INFO	AVAILABLE STORAGE
	SYSTEM SETTINGS	LANGUAGE
		TIME ZONE
		TIME
	MAINTENANCE	CLEAN-UP* ²
		UPDATE SOFTWARE
		AUTOMATIC SOFTWARE UPDATE
		RESCAN MUSIC STORAGE* ³
		EJECT DISC* ⁴
		LATEST RELEASE INFORMATION
		ABOUT
	MUSIC SERVICES	
	SERVICE SETTINGS	N.RADIO BUFFER
		DISABLE MOTS
		CD RANDOM* ⁴
		CD REPEAT* ⁴
		AUTO-RIP* ⁴
		RIP THEN PLAY* ⁴
		RIP FORMAT* ⁴
		CD RIPPING DEVICE* ⁴

¹ Only available in Option 1 – 6.

² Only available when N.MUSIC is selected and internal hard disk is used.

³ Only available when an external server is used.

⁴ Only available if optional CD Ripping Device is connected.

⁵ Only available when AUDIO MASTER is YES.

NETWORK INFO

HOST NAME

LOCATION

IP ADDRESS

MAC ADDRESS

CLIENTS CONNECTED

NETWORK CONNECTION

BONJOUR STATUS

MUSIC SERVER STATUS

SHARED FOLDER NAME

USER NAME

ROLESPLAY TIMER*¹

AUDIO MASTER

AM OPTION

N.MUSIC*⁵N.RADIO*⁵MUSIC SERVICES*⁵CD*⁴ *⁵

¹* Only available in Option 1 – 6.

⁴* Only available if optional CD Ripping Device is connected.

⁵* Only available when AUDIO MASTER is YES.

MUSIC SERVICES is only available if a supported music service account is registered.

Menu overview – advanced

Menus you use in the daily operation of your BeoSound are available when you use the pointer and the wheel.

Additional menus used for advanced settings are “hidden”, because you do not need them very often, because they are just ‘status displays’, or because changing the settings in these menus may affect the performance of your BeoSound.

To bring up these ‘advanced’ menus:

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS.
- > Press → twice and press GO.

Only the additional menus are shown here.

SYSTEM INFO	BS5 CASE TEMP
	BM5 CASE TEMP
	BM5 HDD TEMP
	BM5 UPTIME
SYSTEM SETTINGS	IR TIMEOUT* ⁵
	POWER SAVING
	DEBUG LOGGING
MAINTENANCE	SUBMIT LOGS TO BANG & OLUFSEN
	REBOOT
SERVICE SETTINGS	MUSIC STORAGE
	MUSIC SERVER
	REBUILD MUSIC SERVER* ⁶
PRODUCT INFO	CD DRIVE* ⁷
NETWORK SETTINGS	CLIENT PASSWORD
	HOST NAME
	LOCATION
ROLES	DELAY* ⁸

⁵ Only available when AUDIO MASTER is YES.


⁶ Only available when MUSIC SERVER is YES.

⁷ Indicates whether a CD Ripping Device is connected or not. Use this menu to check if CD Ripping Device is connected properly. Options are: ‘DETECTED’ and ‘NOT DETECTED’. If the menu states ‘NOT DETECTED’ check the cable connections between BeoSound 5 and the CD Ripping Device.

⁸ Only available when AM OPTION is 0.

Close-up operation

The music system is designed for close-up operation. You can browse in music and stations and make selections.

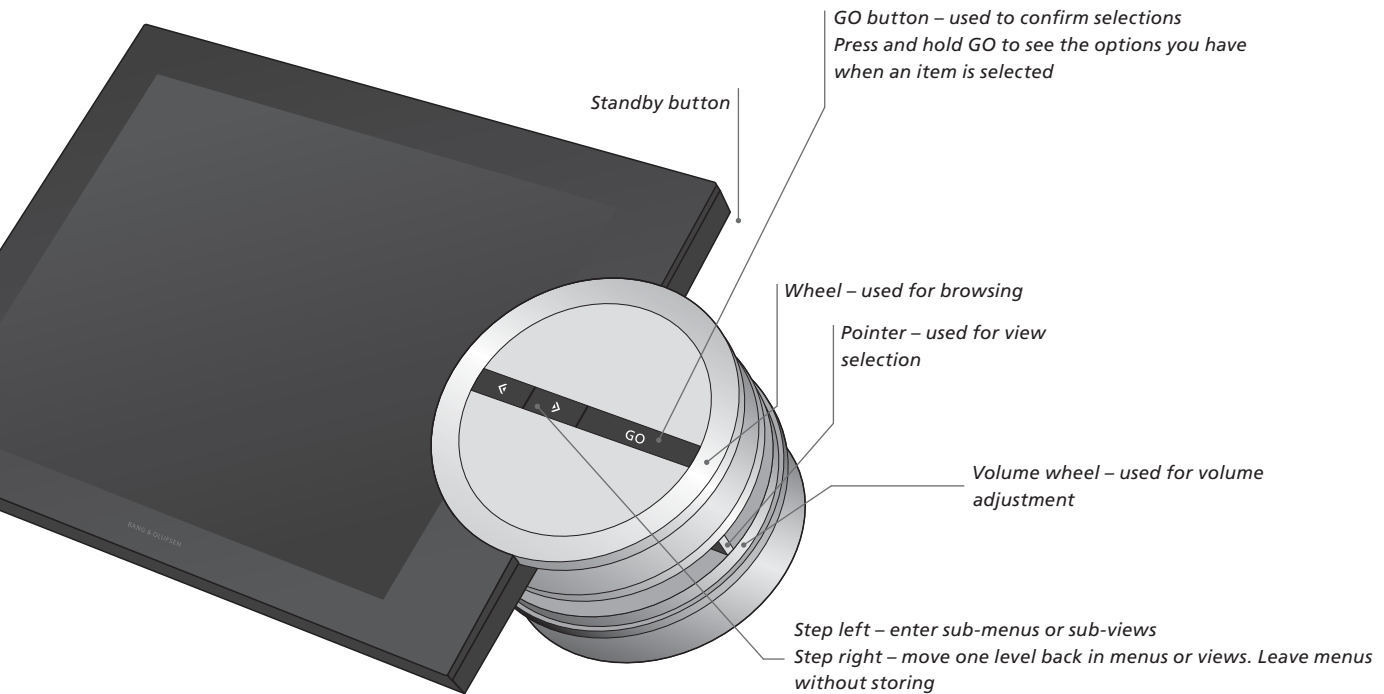

Depending on which source you are using and which view you are in, you get different options when you press and hold **GO** while an item is highlighted.

N.MUSIC

REMOVE ... Remove album, artist or track from views and lists.

ADD TO ... Add item to favourites. If you do not want a specific track to be included in the playlist generated by MOTS, you must add it to the **EXCLUDE LIST**.

N.RADIO

ADD TO ... Add station to favourites.

Coloured lists and numbered favourites

REMOVE ... Remove the album, artist, track or station from a list.

CLEAR LIST ... Remove everything from the list in question.

PLAY QUEUE

REMOVE ... Remove the track from the play queue.

CLEAR QUEUE ... Remove everything from the play queue.

ADD TO ... Add item to favourites. If you do not want a specific track to be included in the playlist generated by MOTS, you must add it to the **EXCLUDE LIST**.

EXCLUDE LIST

REMOVE ... Remove item from the exclude list to include it in MOTS again.

CLEAR LIST ... Remove everything from the exclude list.

RIPPING

While ripping a CD, the tracks appear individually in the ripping list. The ripped tracks can be selected for playback.


RECENTLY ADDED

This list contains all tracks recently added to the internal hard disk. The list is sorted in the order the albums have been added to the hard disk. Tracks added by means of the CD Ripping Device as well as tracks transferred from a connected computer are included in the list.

*If your music system is equipped with the optional CD Ripping Device, the option **EJECT DISC** is shown for all sources.*

How to use Beo5 or Beo6

If you use Beo5 or Beo6, it must be configured for use with the music system. Contact your retailer.

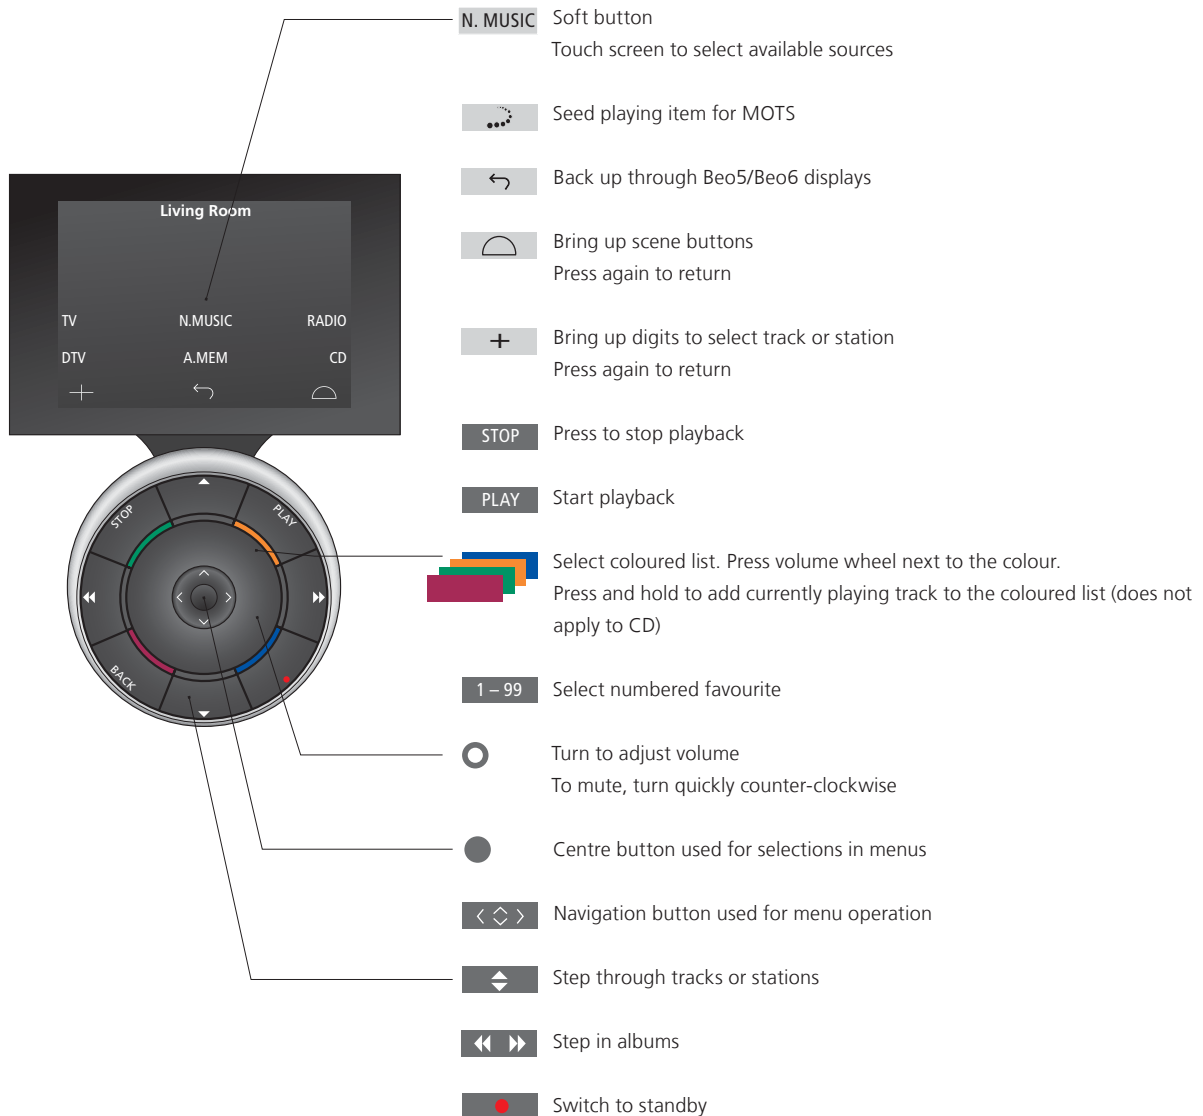

Two-way communication with Beo6

When your Beo6 remote control is configured for two-way communication and connected to your wireless network, you can browse the music on your music system with the remote control. You can see what is currently playing and change tracks or add to your play queue.

Your music system must also be connected to your network.

For further information about connecting Beo6 to a wireless network, refer to its own Guide.

When you want to operate BeoSound 5 wirelessly with Beo6, you must wait for Beo6 to connect to the wireless network.

If you place Beo6 in the charger, the playing screen remains on. You can still operate BeoSound 5.

Browse N.MUSIC on Beo6

The cover of the track currently playing is shown on Beo6 and you can browse through your music collection to add tracks to the play queue or to make a new MOTS seed. When you make a new MOTS seed, playback of the track is interrupted as soon as the new MOTS queue is generated.


To browse music ...

- > Touch the button activating your music source (e.g. N.MUSIC).
- To switch on the product, you must be within IR range.*
- > Choose the button for the sorting you wish to use; ALBUM or ARTIST.
- > Choose a letter to bring up a list of Albums or Artist starting with this letter. Albums and Artists are sorted alphabetically.
- > Slide your finger across the screen (from top to bottom or vice versa) to move from one screen to the next.
- > Press shortly to select.
- > Press and hold to bring up options for the chosen item.
- > Press the + sign to bring up the 'Playing screen'.


To add to the play queue ...

- > Press and hold the item to bring up the option QUEUE.
- > Press the QUEUE button to add the track to the play queue.


To use a track as MOTS seed ...

- > Press and hold the item to bring up the option MOTS.
- > Press the MOTS symbol  to use the track as a MOTS seed.


In all lists you can press and hold an item to bring up the screen with options for that item.

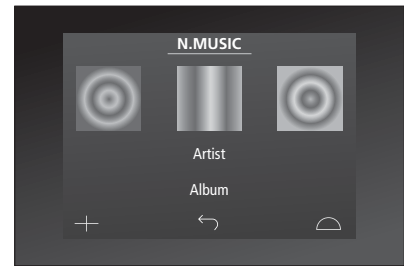


The cover from the most recently played track is shown to the left. The middle cover is recently added and the right cover serves as inspiration for new music.

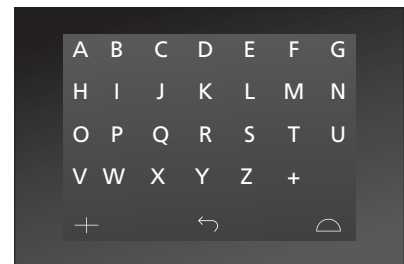

Press a letter to see the list of Albums or Artists.

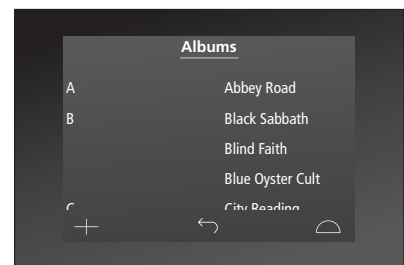

To return to the "letter keyboard", press a letter to the left on the screen.

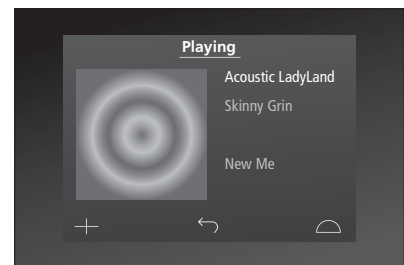

Press the cover on the "Playing" screen to bring up the Play Queue.

How to use Beo4

The music system can also be operated with the Beo4 remote control.

The Beo4 display shows you the activated source or function

- N. MUSIC** Switch on N.MUSIC. Press **LIST** to bring up N.MUSIC in the display*¹
- N. RADIO** Switch on N.RADIO. Press **LIST** to bring up N.RADIO in the display
- A.AUX** Switch on A.AUX source. Press **LIST** to bring up A.AUX in the display
- MOTS** Seed playing item for MOTS. Press **LIST** to bring up MOTS in the display
- RADIO** Switch on N.RADIO, if the N.Radio source is configured to this button
- CD** Switch on CD player, if the optional CD Ripping Device is connected and configured to this button
- A.MEM** Switch on N.MUSIC, if the N.Music source is configured to this button
- 1 – 9** Select a numbered favourite to play. If a CD is playing, use number buttons to select track.
- LIST** Display extra “buttons” for functions or sources in the Beo4 display. Use **▲** or **▼** to step in the list and press the **centre button** to accept
- < >** Centre and navigation button; Accept selections or navigate in the **LIST** menu
- ▲ ▼** Step through tracks or stations
- ⏮ ⏭** Step in albums
- Coloured buttons** Select coloured music or radio list. Press and hold to add currently playing track to the coloured list (does not apply to CD)
- ◇** Adjust volume
To mute, press the middle of the button
- STOP** Press to stop playback
- PLAY** Press to start playback. Press and hold to seed playing item for MOTS
- Switch to standby

¹If **AUDIO MASTER** is set to **NO**, for more information, see [Audio Master](#), you must activate Spotify – provided that you have an account – by pressing **LIST** until **N.MUSIC** is shown in the Beo4 display, and then pressing **1**. To activate **A.AUX**, press **LIST** until **N.MUSIC** is shown in the Beo4 and then press **2**.

Adjust sound settings

Store your preferred sound settings. When you store a sound setting, your system starts playing at this level every time you switch it on.

Sound settings are preset from the factory to neutral values which suit most listening situations.

When you connect BeoLab 5 speakers to the music system, this must be set up in the SPEAKER TYPE menu.

The **SOUND** menu is not available when your music system is set to Option 0.


Adjust volume, bass or treble

You can preset levels for sound volume, bass, treble and balance.

The loudness feature compensates for the human ear's lack of sensitivity to high and low frequencies. These frequencies are boosted at low volume levels so that low music becomes more dynamic.

Make sound settings ...

- > Use the **pointer** to highlight **MODE**.
- > Turn the **wheel** to select **SETTINGS** and press **GO**.
- > Use the **pointer** to highlight **SOUND**.
- > Turn the **wheel** to select the sound element you wish to adjust; **VOLUME**, **BALANCE**, **BASS**, **TREBLE**, **LOUDNESS** or **SPEAKER TYPE** and press **GO**. The current value is the 'wheel focus' upon entry.
- > Turn the **wheel** to adjust the sound setting and press **GO** to store.

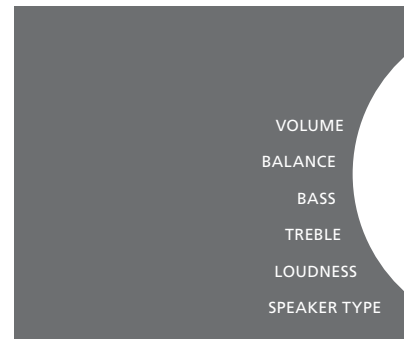

While adjusting sound, the speakers react according to the adjustment.

Volume 0 mutes the sound. It is not possible to store volume level 0 or volume levels above 75.

If your music system is set to Option 0, the volume display on the music system always shows the stored volume.

Change language and time zone

You can change the display language of your music system at any time.

Once a language is chosen, all menus and display messages are shown in this language.

The music system may restart when you change language.

You must make sure the time zone is set correctly, if your BeoSound 5 is to be part of a Play Timer.

If the time cannot be set automatically, you can set it manually.

You can change the display language of your music system to your liking.

Change language ...

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS and press **GO**.
- > Use the **pointer** to highlight SYSTEM SETTINGS.
- > Turn the **wheel** to select LANGUAGE and press **GO**.
- > Turn the **wheel** to select the language you want and press **GO**.
- > Use the **pointer** to leave the menu.

Set the correct time zone ...

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS, and press **GO**.
- > Use the **pointer** to highlight SYSTEM SETTINGS.
- > Turn the **wheel** to select TIME ZONE, and press **GO**.
- > Turn the **wheel** to select the correct time zone, and press **GO**.
- > Use the **pointer** to leave the menu

Set the time ...

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS, and press **GO**.
- > Use the **pointer** to highlight SYSTEM SETTINGS.
- > Turn the **wheel** to select TIME, and press **GO**.
- > Turn the **wheel** to select Year, and press **GO**.
- > Turn the **wheel** to select the setting you want and press **GO**.
- > Then make settings for month, day and time.
- > Use the **pointer** to leave the menu.



You can select your preferred language in the SYSTEM SETTINGS menu. The current display language is shown upon entry, here; ENGLISH.

The maintenance menu

From the menu, you can activate the clean-up function to delete unwanted tracks from the internal hard disk. The clean-up function is only available when the internal hard disk is selected as music storage.

Note that even though you delete items from the internal hard disk, they re-appear if you transfer them to the hard disk again.

You can also update the product software and read about the latest software in your product.

The advanced menu **SUBMIT LOGS TO BANG & OLUFSEN** collects the products error logs and sends them compressed to Bang & Olufsen over the Internet. These can only be submitted successfully when requested by technician.

Clean-up function

You use the clean-up function to delete tracks, albums or artists permanently from the internal hard disk. To use the clean-up function, you must switch it on while N.Music is active.

Switch clean-up on ...

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS, and press **GO**.
- > Use the **pointer** to highlight MAINTENANCE.
- > Turn the **wheel** to select CLEAN-UP, and press **GO**.
- > Turn the **wheel** to select ON, and press **GO**.

Now when you highlight an item in any list, for example Artist view for N.Music, you get the option to delete items, when you press and hold the GO button.

Manual software update

You can choose to update software manually or set the system to update software automatically. The system restarts when you update software.

Update software manually ...

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS and press **GO**.
- > Use the **pointer** to highlight MAINTENANCE.
- > Turn the **wheel** to select UPDATE SOFTWARE and press **GO**.
- > The display shows the Bang & Olufsen logo and the message: 'Checking for new software - Press GO to cancel' appears.
- > When the software update is completed, the message 'Download 100% complete' appears on the display. The system shuts down and restarts. If no new software is available, the message 'No new software update available' appears on the display.

NOTE! Updating software manually is a one time operation that does not affect the setting 'AUTOMATIC SOFTWARE UPDATE'.

NOTE! Playback is affected when updating software manually.

Automatic software update

We recommend that you leave the automatic software update setting on.

Automatic software update ...

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS and press **GO**.
- > Use the **pointer** to highlight MAINTENANCE.
- > Turn the **wheel** to select AUTOMATIC SOFTWARE UPDATE. Press **GO**,
- > Select YES or NO and press **GO** to store. The setting is enabled from the factory.
- > Use the **pointer** to leave the menu.

NOTE! We recommend that you do not change the setting 'AUTOMATIC SOFTWARE UPDATE –YES'. If the setting is disabled, the system does not automatically look for new software updates.


Eject disc

If your music system is equipped with the optional CD Ripping Device, you can use this function to eject a loaded disc. However, EJECT DISC is also always available as an option under all sources.

Eject a loaded disc ...

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS, and press **GO**.
- > Use the **pointer** to highlight MAINTENANCE.
- > Turn the **wheel** to select EJECT DISC, and press **GO**.

[For information on how to make settings for the optional CD Ripping Device, see "Service settings".](#)

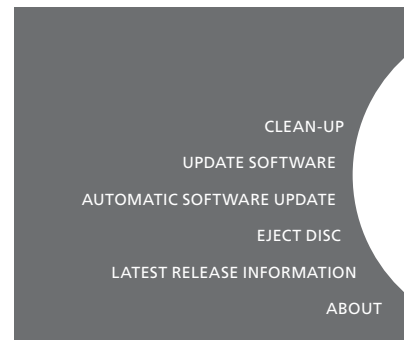

If you use the CD Ripping Device mainly as a CD-player, you should set the AUTO-RIP function to OFF.

Service settings

In the SERVICE SETTINGS menu, you can increase the internet radio buffer time and disable the MOTS function.

You can make setting for the optional CD-Rip to decide if ripping should take place automatically and if the CD being ripped should be played automatically while being ripped. If you want to use the CD Ripping Device mainly as a CD-player, you must change the default settings here.

You can also bring up the "hidden" menus to select music storage.

N.RADIO buffer

If the sound seems to drop out when you listen to internet radio, you can optimise reception from a poor internet connection or a poor netradio stream by increasing the buffer time.

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS and press **GO**.
- > Use the **pointer** to highlight SERVICE SETTINGS.
- > Turn the **wheel** to select N.RADIO BUFFER and press **GO**.
- > Turn the **wheel** to select a buffer length in seconds and press **GO**.

Note that when the buffer length is increased, the radio start-up time may also increase.

Bang & Olufsen cannot vouch for the quality of net radio stations available from programme providers.

Disable MOTS

The MOTS function automatically uses the last track in your play queue to generate a series of similar tracks. MOTS is enabled from the factory. However, if you only want to listen to music you have actively selected, you can disable the MOTS function.

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS and press **GO**.
- > Use the **pointer** to highlight SERVICE SETTINGS.
- > Turn the **wheel** to select DISABLE MOTS and press **GO**.
- > Turn the **wheel** to select YES and press **GO**.

When MOTS is disabled, music only plays when you have manually added it to the play queue. [For more information about MOTS, see "MOTS".](#)

CD Ripping Device start up

The CD Ripping Device is set to start up when you operate the BeoSound 5 close up, either by turning the wheel, moving the lever or pressing one of the buttons. You can change this setting so the CD Ripping Device is always switched on, when the BeoSound 5 is switched on.

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS and press **GO**.
- > Use the **pointer** to highlight SERVICE SETTINGS.
- > Turn the **wheel** to select CD RIPPING DEVICE and press **GO**.
- > Turn the **wheel** to select ALWAYS ON and press **GO**.

With the factory setting 'MANUAL ON', the CD Ripping Device will not switch on if you operate BeoSound 5 with a remote control or from a link room. You must operate the BeoSound 5 close-up to switch the CD Ripping Device on.

Use the CD Ripping Device as a CD-ripper or as a CD player

When the optional CD Ripping Device is connected, you can set it up to start ripping automatically when you load an audio CD. When a CD is ripped, meta data are transferred automatically, if available. If no meta data are available, these can be added manually and transferred via BeoConnect.

If you want to use the CD Ripping Device mainly as a CD player, you should set AUTO-RIP to OFF.

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS and press **GO**.
- > Use the **pointer** to highlight SERVICE SETTINGS.
- > Turn the **wheel** to select AUTO-RIP and press **GO**.
- > Turn the **wheel** to select OFF and press **GO**.

If you select OFF, ripping will only start when you select it.

If AUTO-RIP is set to OFF, the CD remains in the drive after ripping.

Rip then play

When you rip an audio CD, you can set the system up to play the CD as soon as it is ripped. The music system will start playing the first track on the CD as soon as it has been ripped.

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS and press **GO**.
- > Use the **pointer** to highlight SERVICE SETTINGS.
- > Turn the **wheel** to select RIP THEN PLAY and press **GO**.
- > Turn the **wheel** to select ON and press **GO**.

You can select a different source, album, artist or track at any time while ripping a CD. However, you cannot step in tracks on the CD you are ripping before each track is ripped.

Rip format

CDs can be ripped in either WMA lossless or MP3 320 kbps format. Only standard CDs with uncompressed content can be ripped.

- > Use the pointer to highlight MODE.
- > Turn the wheel to select SETTINGS and press GO.
- > Use the pointer to highlight SERVICE SETTINGS.
- > Turn the wheel to select RIP FORMAT and press GO.
- > Turn the wheel to select the format you want and press GO.

Random playback

If you use the CD Ripping Device as a CD-player, you can set it up to play the tracks on the loaded CD in random order.

- > Use the pointer to highlight MODE.
- > Turn the wheel to select SETTINGS and press GO.
- > Use the pointer to highlight SERVICE SETTINGS.
- > Turn the wheel to select CD RANDOM and press GO.
- > Turn the wheel to select ON and press GO.

The function remains on until you switch it off again.-

Repeated playback

If you use the CD Ripping Device as a CD-player, you can set it up to play the loaded CD again and again.-

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS and press **GO**.
- > Use the **pointer** to highlight SERVICE SETTINGS.
- > Turn the **wheel** to select CD REPEAT and press **GO**.
- > Turn the **wheel** to select ON and press **GO**.

The function remains on until you switch it off again.

Music storage

If you use a NAS as music storage, you must set up BeoSound 5 for it. From the factory BeoSound 5 is set up for use with the internal hard disk.

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS.
- > Press **→** twice and press **GO**.
- > Use the **pointer** to highlight SERVICE SETTINGS.
- > Turn the **wheel** to select MUSIC STORAGE and press **GO**.
- > Turn the **wheel** to select BeoMaster 5 (internal hard disk) or a connected server and press **GO**.

Bang & Olufsen recommends use of specific Network Attached Storage devices, contact your Bang & Olufsen retailer for further information.

Music server

In a setup with, for example, the BeoSound 5 Encore also, you can set the BeoSound 5 up to act as a music server, in order for other devices to access the contents.

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS.
- > Press **→** twice and press **GO**.
- > Use the **pointer** to highlight SERVICE SETTINGS.
- > Turn the **wheel** to select MUSIC SERVER and press **GO**.
- > Turn the **wheel** to select YES and press **GO**.

When the MUSIC SERVER function is activated, the system will not enter 'suspend' mode and the hard disk does not switch off.

Rebuild music server

This option is only available if the internal hard disk is used as music server. If for some reason the music stored on the internal hard disk does not appear for browsing, you can make a new scan of the music on the internal hard disk.

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS.
- > Press **→** twice and press **GO**.
- > Use the **pointer** to highlight SERVICE SETTINGS.
- > Turn the **wheel** to select REBUILD MUSIC SERVER and press **GO**.
- > Turn the **wheel** to select YES and press **GO**.


Network setup

The system can be set up in a network either with a wired or a wireless connection. For the most reliable network connection Bang & Olufsen recommends making a wired connection.

Bang & Olufsen also recommends the use of a separate router and access point – a Network Link router – to ensure the most reliable playback of digital music.

Installation and setting-up of the BeoSound should always be made by a Bang & Olufsen installer.

For more information about Bang & Olufsen network setup, contact your retailer.

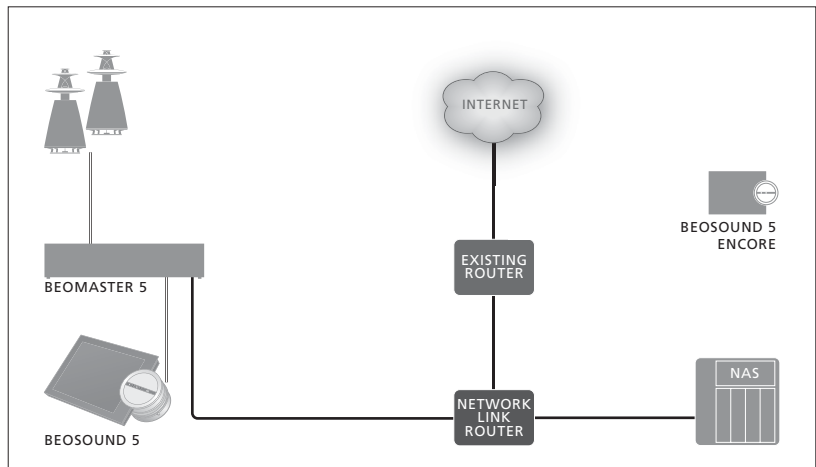

Network Link router

The BeoSound 5 must be connected to the Network Link router. This can be a wired connection or a wireless connection. When using the internal hard disk we recommend a wired connection. A wireless solution requires a wireless USB network adaptor, which must be purchased separately. Once connected BeoSound 5 can play back music stored on a NAS also connected to the Network Link router.

When using a NAS, music must of course be available on the NAS.

See network information

You can see the settings made for your network connection in the NETWORK INFO menu.

- > Use the pointer to highlight MODE on your music system.
- > Turn the wheel to select SETTINGS and press GO.
- > Use the pointer to highlight NETWORK INFO. You can now see the settings made for your network connection.

For information about changing host name or password, see the next page.


Host name, IP address and client password

In some cases you need information about the host name, IP address and client password of your BeoSound 5 setup, for example, if your router has been disconnected.

The information can be looked up in the NETWORK INFO menu, but if you want to change your password or host name, you must enter the 'advanced' menu; NETWORK SETTINGS. If you change the host name, the system restarts.

To change network settings ...

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS.
- > Press **→** twice and press **GO**.
- > Turn the wheel to select NETWORK SETTINGS and press **GO**.
- > Bring up the setting you wish to change and press **GO**.
- > Change the settings you want, select STORE and press GO to save your changes.

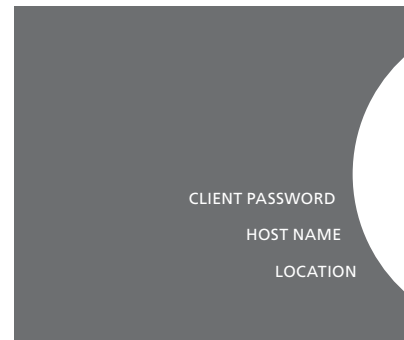


How to make music available

Before you start using your system, you must connect it to the internet and make the music sources you wish to use available. Your music system has multiple sources for your music experience – internet radio, music from a source connected to BeoMaster 5 via line-in (optional accessory required), your BeoMaster 5 or even a Network Attached Storage device (NAS).

Your retailer can help you set up the system and make sources available.

If the internal hard disk is used, music must be transferred to BeoMaster 5 in order to be played. This is done via a PC or MAC using the dedicated BeoConnect software, or via the optional CD Ripping Device.

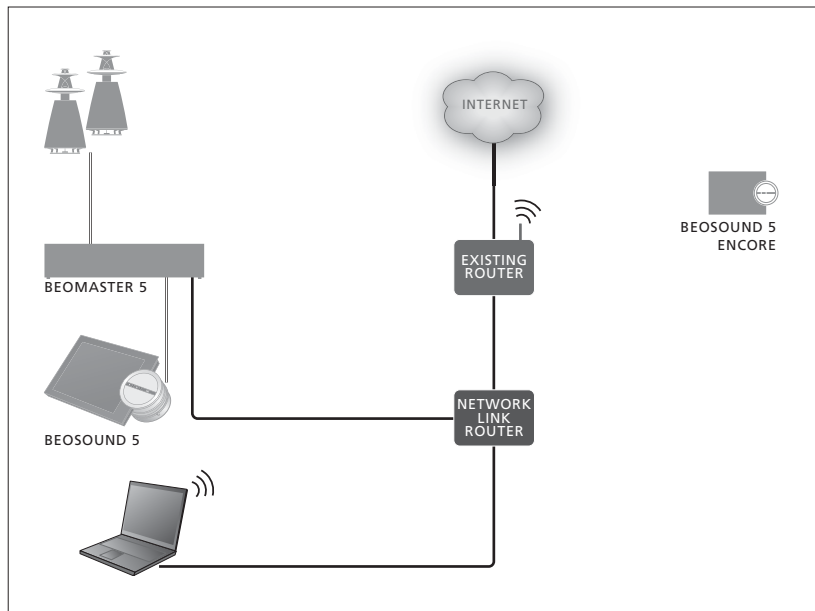

BeoConnect software

The BeoConnect software must be installed on the computer connected to the BeoMaster 5. Connections and setting up should be made by an authorised Bang & Olufsen installer.

BeoConnect for Windows software can be downloaded here:
www.bang-olufsen.com/software-downloads

The Guide for BeoConnect for Windows is included with the software but can also be downloaded here:
www.bang-olufsen.com/guides

BeoConnect software for MAC can be downloaded here:
www.bang-olufsen.com/software-downloads

The Guide for BeoConnect for MAC is included with the software but can also be downloaded from the website.

You can also use Windows Media Player to rip your CDs and transfer music to BeoMaster 5, and you can use Windows Explorer to organise, or use iTunes if you like, but BeoConnect must be installed on your computer as it serves as the 'link' to BeoMaster 5. See www.bang-olufsen.com/faq and look up BeoSound 5 for more information.

Play internet radio

To listen to radio, the music system must be connected to the internet and you must register through the BeoConnect software. Refer to the BeoConnect guide for more information.


Activate internet radio ...

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select N.RADIO and press **GO**.
- > Select the station you want to listen to and press **GO** to play.

** If you have renamed N.RADIO to RADIO for easy Beo4 navigation, you must select RADIO instead. [For more information, see "Change source names"](#).*

There may be a slight delay before the sound appears. The time depends on the internet connection speed, the length of the N.Radio buffer and the performance of the radio station connected. [For more information, see "N.Radio buffer"](#).

You can add your favourite radio stations to a favourite list to allow for quick selection. [For more information, see "Create coloured lists and numbered favourites"](#).

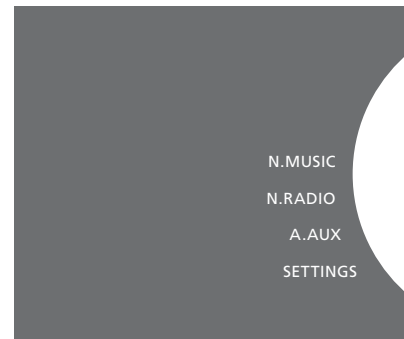

Play music from N.MUSIC source

Your music system allows you to access your digital music storage on your network. The digital music storage can be either the internal hard disk or a selected range of standard NAS devices.

Your Bang & Olufsen retailer must make the installation for you.

If you switch off the music storage (NAS) you will not be able to play music from the storage. When the storage is switched on again, your music system will automatically reconnect to the music storage.

Activate N.MUSIC ...

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select N.MUSIC and press **GO***
- > Select the music you want to listen to and press **GO** to start playback.

** If you have renamed N.MUSIC to CD or A.MEM for easy Beo4 navigation, you must select CD or A.MEM instead. [For more information, see "Change source names".](#)*

Music storage ...

From the factory, your music system is set up to play music from the internal hard disk. However, you can change this to a NAS device, if available and if your system is set up for it. [For more information, see "Music storage".](#)

When connecting to a new music storage for the first time, the following applies:

- Your music system requires some time to index the music collection for browsing. For information about file formats, see www.bang-olufsen.com
- MOTS calculation of music on your digital music storage is performed when the music system is in standby. When connecting to a new storage allow for some standby time to do MOTS. The more music files that are stored in the music storage, the longer the calculation takes. The calculation progress can be seen in the QUEUE where the MOTS logo is shown and the completed percentage. Calculation of a large music collection takes days.

In order to access music on your NAS, you must enable UPnP/DLNA on the NAS device. See the guide enclosed with your NAS device.


Bang & Olufsen have tested and verified your music system on several high-end NAS devices. To obtain the best possible performance only the verified NAS devices are recommended. For more information contact your retailer.

Additional music from line-in connection

You can listen to music from an external device on the speakers of your music system.

A USB audio interface is required for the connection. This must be purchased separately. Using a Bluetooth device with BeoSound 5 also requires a Bluetooth receiver connected to the USB audio interface, this is also an optional accessory.

Further options are available for listening to music from external devices, contact your Bang & Olufsen retailer for more information.

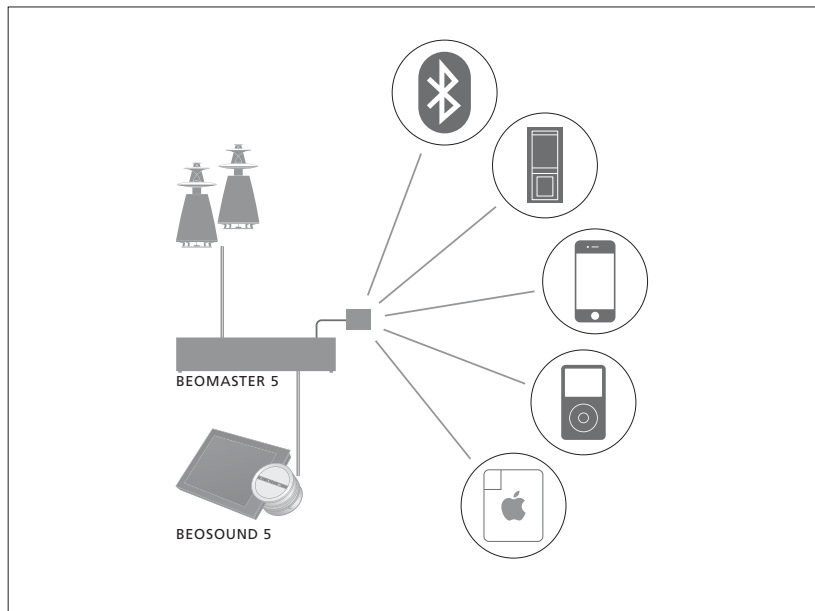

The music device you connect is the source A.AUX on BeoSound 5. The source can be activated but not operated directly on the BeoSound or via remote control.

Activate A.AUX source ...


- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select A.AUX and press **GO**.
- > Now operate the connected device as usual.

Additional music from external device

You can listen to music from an external device, such as a smartphone or a computer, on the speakers of your music system.

The device must be connected to the same network as BeoSound 5 and an application on your device is required to communicate with BeoSound 5. Once communication is established, the 'control' over BeoSound 5 is taken by the external device. This means that if the external device selects BeoSound 5 as output source while you are listening to, for example, N.Radio, N.Radio is interrupted and music from the external device is played instead.

Contact your Bang & Olufsen retailer for more information.

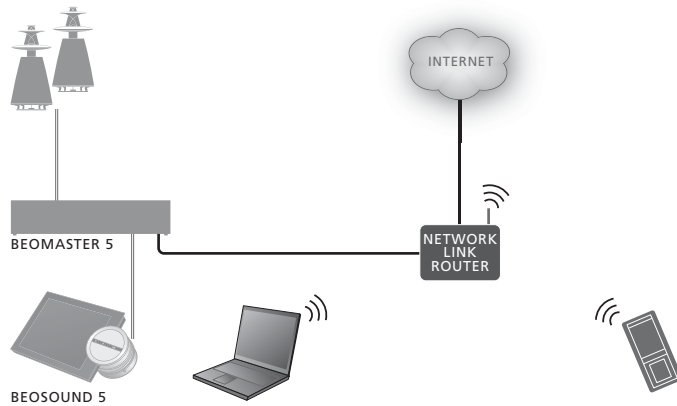

The music device you connect appears as the source A.AUX on BeoSound 5. The source A.AUX interrupts any other source currently active on BeoSound 5. The source cannot be operated directly on the BeoSound or via remote control, nor can it be activated on BeoSound 5 or via remote control.

Activate A.AUX source ...

- > Establish 'communication' with BeoSound 5 from your device.
- > Now operate the connected device as usual.

Create coloured lists and numbered favourites

You can make your personal playlists. The four colours red, green, yellow and blue are available for playlists. For example, you can let each family member make a list of their own favourite music or radio stations or create lists for specific occasions, for example, holidays or parties.

Assigning a number to a radio station gives you quick access by remote control.

Assigning a number to an N.Music item allows you to use the numbered item as a MOTS seed, not to select it for playback with the number buttons on the remote control.

Coloured lists and numbered favourites apply to the music storage you have selected. If you change the storage device, they are cleared.

Coloured lists

Each of the four coloured lists is a playlist which can contain several tracks, albums, artists or radio stations. When you add to a coloured list, the item is added.

To make a coloured list ...

- > Find the track, album or station you want to add to a coloured list, then press and hold **GO**.
- > Turn the **wheel** to select a colour.
- > Release **GO**.
- > You can now select the coloured list in the FAVOURITES menu or by pressing the appropriate colour on your Bang & Olufsen remote control.

Four coloured lists are available for each source, i.e. red, green, yellow and blue for the radio source and music source respectively.

Numbered favourites

Each numbered favourite can contain either one radio station or one track. When you assign a new item to a number already in use, it will replace the previous item.

To make a numbered favourite ...

- > Find the item you want to give a number, then press and hold **GO**.
- > Turn the **wheel** to select a number.
- > Release **GO**.
- > You can now select the numbered favourite in the FAVOURITES menu or by pressing the appropriate number on your Bang & Olufsen remote control.

Selecting a numbered favourite for N.RADIO (RADIO) switches to the radio station assigned to this number.

Selecting a numbered favourite for N.MUSIC (A.MEM or CD) means that the track is used for MOTS seed, not that it is played immediately.

MOTS

MOTS allows you to continuously listen to similar music. The MOTS feature measures music similarity on many different parameters such as sound, dynamics and rhythmic aspects, to be able to generate a 'play queue' of similar tracks to be played.

MOTS makes it convenient to find music for a certain situation, or to just start playing. You only need to pick one song, and then MOTS automatically creates a list of similar music.

One source at the time

MOTS uses the music source currently selected to generate a play queue. MOTS uses only one source at the time.

Note MOTS play queues can only be generated from the internal hard disk or a connected NAS.

MOTS calculations

MOTS calculations are based on sound, dynamics, and rhythmic aspects and searches across parameters such as artist, album and genre. MOTS uses the last added track of a play queue to auto-generate a sequence of similar tracks, which is added to the already existing content of the play queue. MOTS is disabled if the only content of the play queue is a coloured list.

MOTS calculations are performed on the music storage while your music system is in standby. When you add a music storage either for the first time or after it has been deactivated, it will require some standby time to complete MOTS calculations.

[For information on how to disable and enable the MOTS feature, see "Disable MOTS".](#)



The MOTS logo.

MOTS analysis

When you have transferred all your music to the internal hard disk, the MOTS function needs time to analyse the music collection before it can generate a play queue. As a rule the analysis takes 15 seconds per track.

When a NAS server is used as music storage, the music on the NAS is also analysed.

Analysis only takes place while the system is in standby. Added tracks can therefore only be part of a MOTS queue when the product has been in standby long enough to analyse all tracks.

The Roles menu

Your music system can take part in a Timer programmed on an audio or video master in your link setup.

This means that if you activate the function in your music system, the speakers connected to your music system will start playing at the programmed time.

In the ROLES menu, you can change which remote control button should activate the music and radio playback.

From the factory, the N.MUSIC button activates the music playback from BeoMaster 5 (or another music server you have chosen).


The N.RADIO button activates radio from the internet.

On Beo4 both buttons are found in the LIST menu. If you have a Beo4 and use the sources often, we recommend you to change the source names and have the CD or A.MEM button activate the N.MUSIC and the RADIO button activate the N.RADIO source instead.

Activate Play Timer

To use the speakers connected to your music system, you must activate the Play Timer in BeoSound 5. Once activated it remains active until switched off again.

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS and press **GO**.
- > Use the **pointer** to highlight ROLES.
- > Turn the **wheel** to select PLAY TIMER and press **GO**.
- > Turn the **wheel** to select ON and press **GO**.
- > Use the **pointer** to leave the menu.

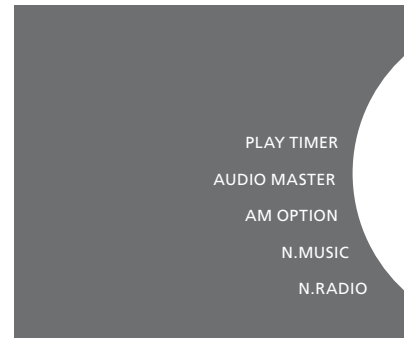

Contents of the ROLES menu.

The sources available in your music system can also be used as sources of a programmed Timer.

If the Timer uses N.MUSIC as source, playback will start from the red favourite list. Therefore, if nothing is stored in the red list, nothing is played.

If the Timer uses N.RADIO as source, you can select a numbered favourite (channel), if nothing is stored on the selected channel number in your music system, nothing is played.

Remember that if you have changed the name of the BeoSound 5 sources, the new names are the ones to be selected when programming a Timer.

Audio master

The setting in the AUDIO MASTER menu determines if the BeoSound 5 acts as audio master in your setup. The setting affects the "role" the BeoSound 5 has in you setup and which menus are available. Contact your Bang & Olufsen retailer for further information.

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS and press **GO**.
- > Use the **pointer** to highlight ROLES.
- > Turn the **wheel** to select AUDIO MASTER and press **GO**.
- > Turn the **wheel** to select the appropriate setting for your setup and press **GO** to store.

If AUDIO MASTER is set to NO, you must activate Spotify – provided that you have an account – by pressing LIST until N.MUSIC is shown in the Beo4 display and then you must press 1. To activate A.AUX, press LIST until N.MUSIC is shown in Beo4 display and then press 2.

If AUDIO MASTER is set to NO, you cannot use the CD Ripping Device as a CD-player.

AM Option

When BeoSound 5 is set up as the audio master, Option programming must be made as well

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS and press **GO**.
- > Use the **pointer** to highlight ROLES.
- > Turn the **wheel** to select AM OPTION and press **GO**.
- > Turn the **wheel** to select the appropriate Option for your setup and press **GO** to store.

The music system has five different

Option settings:







Option 0. Used when your music system is connected to your video system and no speakers are connected directly to your music system.

Option 1. Used when your music system is set up on its own or connected to a video system, when speakers are connected to your music system.

Option 2. Used when your music system is set up in one room and connected to a video system set up in another room.

Option 5. Used when your music system is set up in a link room which also comprises a Bang & Olufsen television.

Option 6. Used when your music system is set up in a link room without a Bang & Olufsen television.

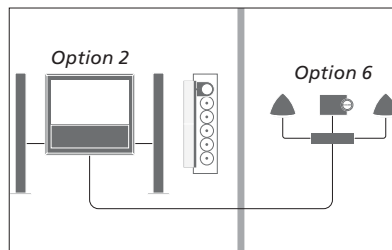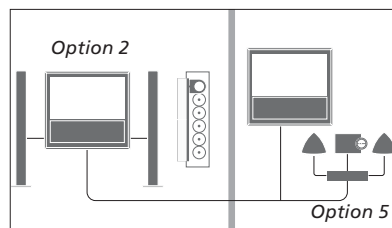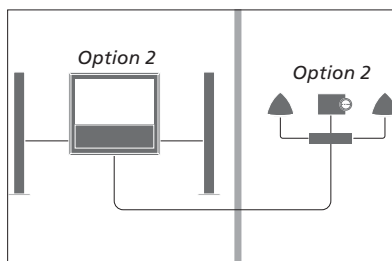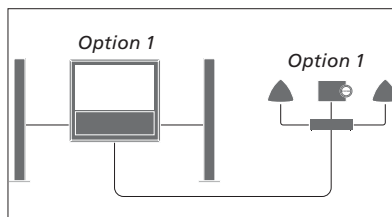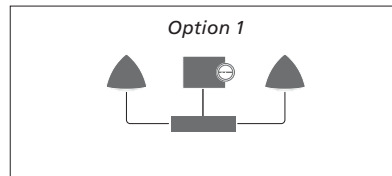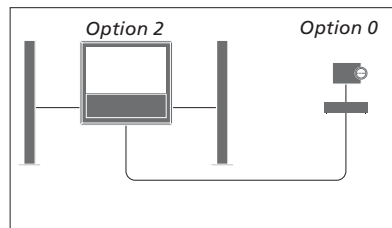

Change source names

For easier access to the N.MUSIC source by remote control, you can set the system to activate the N.MUSIC source via the A.MEM button.

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS and press **GO**.
- > Use the **pointer** to highlight ROLES.
- > Turn the **wheel** to select either CD, A.MEM or N.MUSIC and press **GO**.
- > Make changes for the N.RADIO source as well, if you want.
- > Press **GO** to store.

NOTE! When you change the source name to CD or A.MEM, it is also changed in the display of the music system, and you must replace N.MUSIC, when mentioned in the operation sequences, with CD or A.MEM. Also N.RADIO is replaced by RADIO, if you make a change for this source as well.

Source naming

The source name determines which Beo4 button activates the source in question and also which source name is shown in the BeoSound 5 display.

If the optional CD Ripping Device is connected, the three source names are interchanged, if you switch one of them. This means that if you change N.MUSIC to CD, the CD Ripping Device is activated by selecting N.MUSIC.

Delay

To ensure that a connected television is ready to play music from the music system, a delay can be set. This only applies when the music system is set for Option 0.

- > Use the **pointer** to highlight MODE.
- > Turn the **wheel** to select SETTINGS.
- > Press **>** twice and press **GO**.
- > Use the **pointer** to highlight ROLES.
- > Turn the **wheel** to select DELAY and press **GO**.
- > Make settings for the necessary delay.
- > Press **GO** to store.

Change start-up time


If you want to make your music system start up faster, you can shorten the start-up time, however this increases the standby power consumption of the system.

You can shorten the start-up time by changing the setting in the **POWER SAVING** menu to **OFF**.

Change default power consumption ...

- > Use the **pointer** to highlight **MODE**.
- > Turn the **wheel** to select **SETTINGS**.
- > Press **>** twice and press **GO**.
- > Use the **pointer** to highlight **SYSTEM SETTINGS** and press **GO**.
- > Turn the wheel to select **POWER SAVING** and press **GO**.
- > Turn the wheel to select **AUTOMATIC** or **OFF** and press **GO**.
- > Use the **pointer** to leave the menu.

*The **SYSTEM SETTINGS** menu also contains a **DEBUG LOGGING** menu. The setting in this menu should only be changed when requested by a technician.*

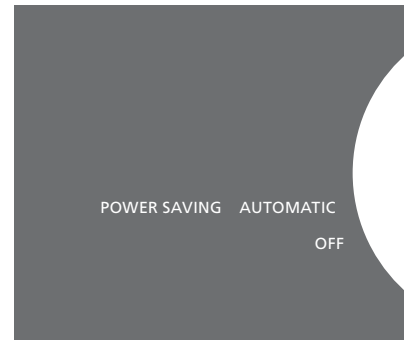

*You can change the standby power consumption in the **SYSTEM SETTINGS** menu. The current setting is shown upon entry, here; **AUTOMATIC**.*